

# M3 Mobile SM20

# Accessory Guide



### Cradle

- 2 Slot Cradle (3 type)
- 8 Slot Cradle (2 type)
- HDMI Cradle



### MISCELLANEOUS

- Battery (2 types)
- USB Cable
- Boot / Hand strap
- Screen protector



### Trigger

- Trigger Handle
- Long range Trigger Handle
- UHF Trigger Handle



### Snap on

- USB Charging only Snap on
- USB / UHF Snap on (3 type)
- Vehicle Cradle



### Wearable

- Ring trigger
- Ring scanner charging cradle
- Holster / Armband

\* The above list may be added or changed.



● 2 Slot charging Cradle



● 2 Slot ethernet Cradle



● Power Supply

**SM 15-2CRD-C00**

SM15/SM20 2-Slot Fast charging only cradle for 1xSM20 & 1xSM20 spare battery. Requires power supply (SM15-PWSP-2XX; sold separately) SM10 & SM10LTE can use this cradle under normal charging speed. (Not fast charging)

**SM 15-2CRD-CC0**

SM15/SM20 2-Slot Fast charging & USB cradle for 1xSM20 & 1xSM20 spare battery. Requires power supply (SM15-PWSP-2XX; sold separately) SM10 & SM10LTE can use this cradle under normal charging speed. (Not fast charging)

**SM 10-2CRD-EC0-HD**

SM10/SM15/SM20 2 slot HDMI, Ethernet cradle for 1x SM20 & 1x SM20 spare battery. Requires power supply (UNIV-PWSP-2XX; sold separately)

**SM 15-2CRD-EC0**

SM15/SM20 2-Slot Fast charging & Ethernet cradle for 1xSM20 & 1xSM20 spare battery. Requires power supply (SM15-PWSP-2XX; sold separately) SM10 & SM10LTE can use this cradle under normal charging speed. (Not fast charging)



● 8 Slot charging Cradle



● 8 Slot ethernet Cradle



● Power Supply

**SM 15-8CRD-C00**

SM15/SM20 8 slot charge(fast)-only cradle for 4x SM20 & 4x SM20 spare battery. Requires power supply (SM15-PWSP-8XX; sold separately) SM10 & SM10LTE can use this cradle under normal charging speed. (Not fast charging)

**SM 15-8CRD-E00**

SM15/SM20 8-Slot Fast charging & Ethernet cradle for 4x SM20 & 4x SM20 spare battery. Requires power supply (SM15-PWSP-8XX; sold separately) SM10 & SM10LTE can use this cradle under normal charging speed. (Not fast charging)

- Multi-slot charging cradle can be configured to hold both maximum of four mobile devices and four battery charging stations. : improves utilization of valuable backroom storage space.
- Composition  
Requires 8 slot power adaptor, power cable
- Sync is stable. Local Area Network is usually not disconnected well. Also, users are able to attach terminal by one hand.
- Lying pose increases area of connection thus stability is growing up mechanically.



### SM 10-TRIG-S00

Scanning Trigger for SM10 LTE/SM15/SM20

- Reduce wrist fatigue when workers are using terminals for long time.
- Save time by counting stocks in warehouse.
- The design is ergonomically made by measurement in mechanical team.
- The trigger has essential functions properly in industrial environments.



### SM 15-TRIG-L00

Trigger Handle equipped with long range scanner for SM15/SM20

- Long-range scanner is essential to easily read many stacked items in warehouse.
- Maximum reliability in tough industrial environments even without bumper.
- Long-range scanner is equipped with EX25 scan engine.
- To charge the Trigger Handle, SM20 Device charging cradle and power supply is needed.



### SM 15-TRIG-UEB, SM 15-TRIG-UFB

UHF RFID & Scanning Trigger for SM15/SM20

- Reading distance of up to 5 m.
- Trigger use (RFID and Scanner).
- Rechargeable and removable battery.
- External antenna overcomes limits of internal antenna by maximizing its efficiency and reading distance - can reach as far as 5 meters.
- Using RFID, searching tag and automatic sync with application.
- Independent battery on gun reader makes it suitable for long hour work shifts. Also, removable battery structure can expand working hours even more.

**UNIV-BTCH-UHF**  
The exclusive battery charger of UHF Gun Reader.  
Required power supply (UNIV-PWSP-2XX; sold separately)



● USB Charging Snap on



● Vehicle cradle

#### SM 15-SNAP-C0U

SM15/SM20 charging USB only Snap On. Could be required Universal Cigarette Lighter Gender (UNIV-PWSP-VUA-XX; sold separately).

- Office & Vehicle both using
- Side Locking
- Lightweight (less than 100 grams)

#### SM 10-VCRD-C00

SM10/SM15/SM20 charging only vehicle cradle by Brodit® within Cigarette Light Adaptor. Accommodates SM10/SM15 with protective boots. Requires vehicle mount (UNIV-RAMS or UNIV-RAMT; sold separately)

- Push the terminal to back direction using the top holder flexibly
- Integral type : Cigar adaptor and cradle



● USB C-type Snap on



● USB Charging Snap on



● UHF Snap on

#### SM 15-SNAP-C0A

SM15/SM20 charging USB C-type only Snap On. Could be required Universal Cigarette Lighter Gender (UNIV-PWSP-VUA-XX; sold separately).

- Slim design enhances frequency of using
- Function as portable station of charging and development

#### SM 15-SNAP-CUS

SM15/SM20 Charging/DC/USB Snap-on. Could be required Universal Cigarette Lighter Gender (UNIV-PWSP-VUA-XX; sold separately).

- USB data only / D.C type Charging
- Use charging & USB Sync easily, and stably in narrow space

#### SM 15-SNAP-UEB

UHF RFID Snap-on for SM15/SM20 CE.

- Easy to remove from device
- No extra Battery required
- Portable and conveniently using outside
- Up to 2.5M Recording distance (When the width of UHF Tag Antenna is about 2cm.)

## Ring Scanner & Cradle



### UNIV-WERS-U20

Ring scanner SE4710, Bluetooth type \*Using the M3 Ring Scanner Application

### UNIV-WERS-U10

Ring scanner SE2707, Bluetooth type \*Using the M3 Ring Scanner Application

### UNIV-WERC-U00

Ring scanner charging cradle (5V USB adapter sold separately, USB cable is included)

### UNIV-WERC-C00

USB Cable for Ring scanner Charing cradle, 1.5M

## Arm Band & Holster



### UNIV-CASE-FSH

SL10, SL10K, SL20, SM10, SM15, SM20 Fabric Holster with Strap, belt

### UNIV-CASE-FAB

SL10, SL10K, SL20, SM10, SM15, SM20 Arm Band



Battery

**SM20-BATT-S41**

SM20 Fast Charging Standard Capacity Spare Smart Battery 4,100mAh. SM10 & SM15 can use this battery without smart battery function.

**SM15-BTDO-SHF**

NFC Battery Door for SM15, SM20 Standard Battery



USB Cable

**UNIV-CABL-UMA**

USB Cable, 1.2M, A to Micro USB Plug.  
Client Communication Cable for SM10/SM15/SM20 USB port to the host system.



Boot

**SM20-BOOT-01**

Rubber Boot for SM20 with replaceable hand strap.  
(Attaches Stylus SM10-STYL/SM15-STYL; sold separately)



Hand Strap

**SM10-STRP**

Hand strap for SM10, SM15, SM20 Detachment available



Screen protector

**SM20-SCPR**

Bullet proof Screen Protector for SM20



Stylus pen

**SM15-STYL**

Spare Stylus with tether for SM15